MIDMARK®

Installation Instructions

002-0348-XX Upholstery Kit for Model 491

KIT COMPONENTS

Part Number	Description	Qty.
028-0141-00	Upholstered Headrest	1
028-0268-00	Upholstered Arm	2
028-0269-00	Upholstered Foot	1
028-0270-00	Upholstered Seat	1
028-0271-00	Upholstered Back	1
003-0520-00	Installation Instructions	1

REQUIRED TOOLS

None

1

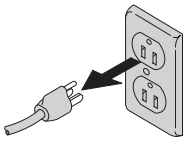

DANGER
Unplug chair from electrical outlet.

2

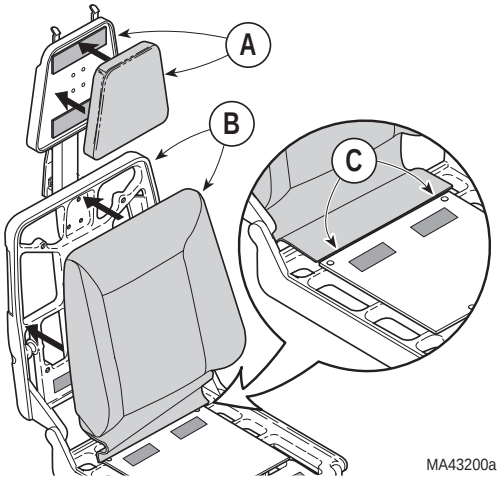

A. Place upholstered head rest in position.

B. Place upholstered back section in position.

NOTE
Flap on upholstered back section must not overlap or interfere with velcro on seat cover section.

C. Place end of flap against seat cover; then insert exess flap material in opening between seat and back section.

3

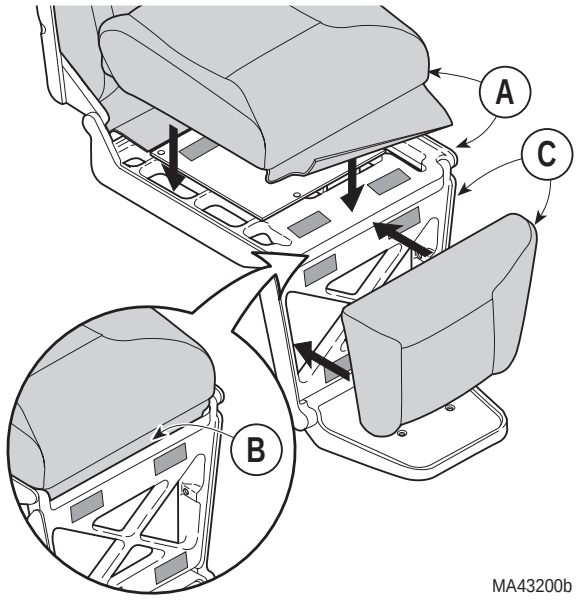

A. Place upholstered seat section in position.

NOTE
Flap on upholstered seat section must not overlap or interfere with velcro on leg section.

B. Insert end of flap into opening between seat and leg section.

C. Place upholstered leg section in position.

4

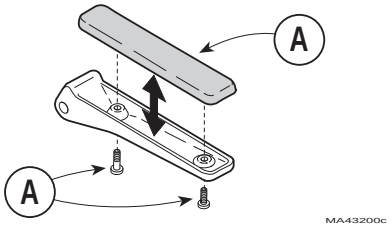

NOTE
When installing screws for arm rest upholstery, longer screws (1 3/8”) must go in holes toward the back, or near pivot point of arm rest.

A. Install upholstered arm rest and secure with screws.

MIDMARK®

Midmark Corporation, Versailles, Ohio 45380 U.S.A.
(937) 526-3662 FAX (937) 526-5542

003-0520-00 Rev. A (1/98)

© Midmark Corporation - 1998